
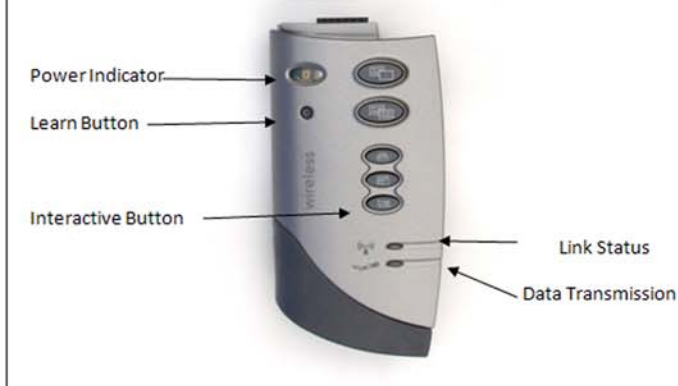


Mimio Quick Setup Guide

- With your projector in place, turn it on.
- Mount the Mimio in the upper-left corner with a 2-3 inch buffer between the projected image and the Mimio device.
- Power the Mimio device with the AC power adapter provided.
- Plug in the wireless adapter into the USB port of the computer.
- Press the Power Indicator button to turn the Mimio device on and press the Interactive button on your Mimio device to begin calibration process.
- You will now see a  on the white board. Using the Mimio mouse (stylus) follow the on screen instructions. This calibrates the white board with the Mimio.
- Everything you do is controled by the Mimio stylus.

Recommended Applications: Smart Notebook, Envision Math, Storytown, endless options...

Mimio Controller



Link light

- Green: A wireless link is established between the unit and the PC
- Amber: There is no wireless link between the Mimio Xi device and the PC.
- Flashing green: Unit is in Learning Process (Searching)

Data Transmission Indicator

- Slow flashing green: System is idle.
- Fast flashing green: Mimio stylus pen is in use.
- Off: No data is being communicated between the Mimio Xi device and the PC.